
Instructions for the Yin Yang Inlay Kit

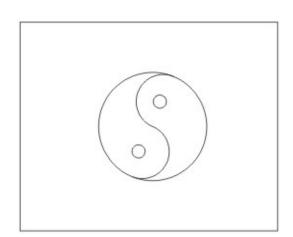

There's a total of 5 pieces in this inlay kit. To start, temporarily slide the brass tube from your pen kit (not included) into the maple background cylinder. Now insert the white and black pieces inside the circle cutout followed by the small black and white dots. Secure with the supplied elastic bands. Remove the brass tube and apply thin CA glue to all of the seams in the pattern.

Now we'll glue the brass tube into the blank. Check the fit of the tube as you'll have to sand the inside of the blank for it to fit. Wrap a small dowel with 100G sandpaper and sand the inside of the barrel until the tube fits smoothly. Scuff the tube up with sandpaper and then glue it in the barrel using 2 part epoxy. Make sure the tube is centered so there's the same amount of space at both ends. Once the glue has cured, sand the ends flush with the brass tube using a belt or disc sander. Don't use a barrel trimmer. Now you can mount the blank on the lathe for final turning and finishing.



Apply whatever finish you're comfortable with as they all work well with these inlay kits. E-mail me at kallenshaan@cox.net with any thoughts or ideas regarding this or any of our other kits.